


23WM-AV002WH





PL	Instrukcja montażu
D	Montageanleitung
GB	Assembly instructions
NL	Handleiding voor de montage



23WM-AV002WH

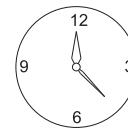

40min

1/8

	(B1)
	x29
	(M1)
	x23
	(T1)
	x19
	(T3)
	x2
	(F36)
	x8
	(F28)
	x2
	(P7)
4,2x19	x4
	(S5)
US 3,5x16	x4
	(K14)
	x2
	(L1)
	x1


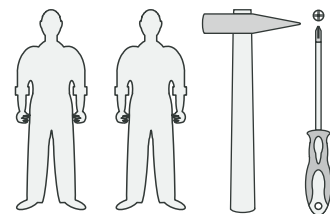
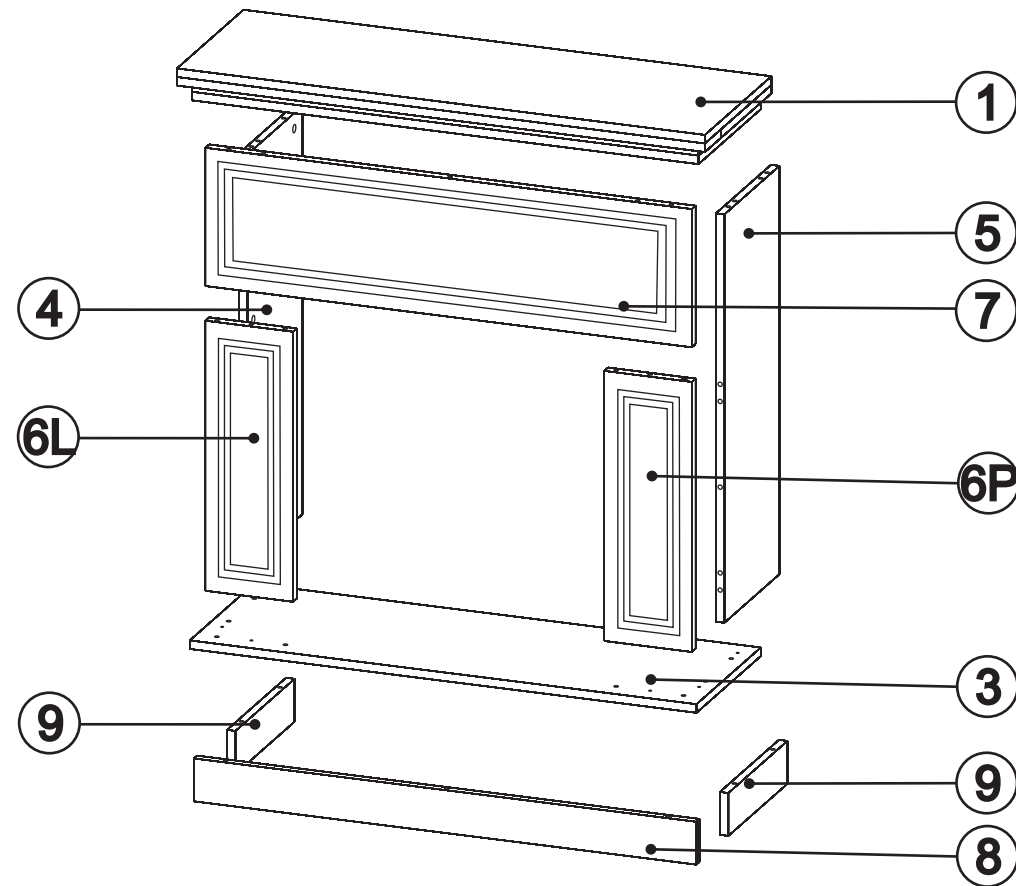


23WM-AV002WH




40min

2/8

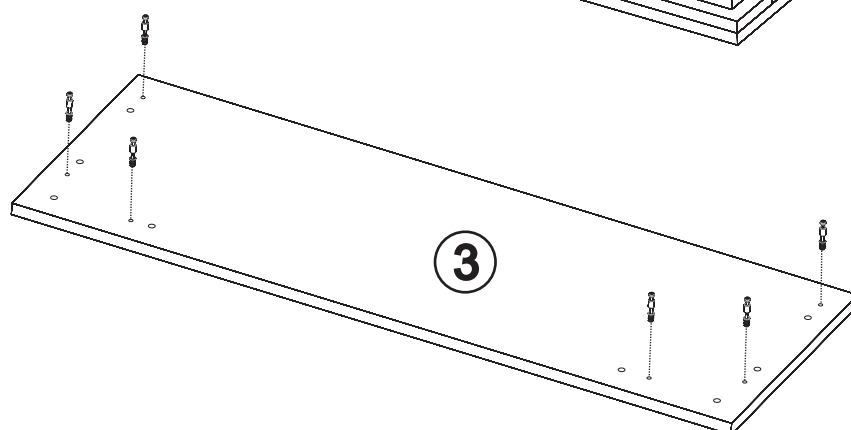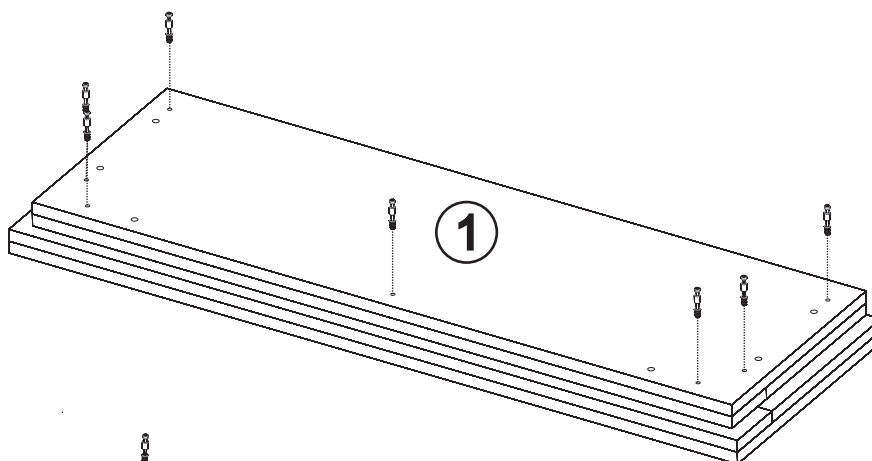
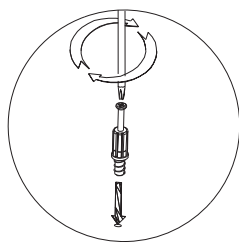


	(B1)
	x12
	(M1)
	x14
	(T1)
	x13

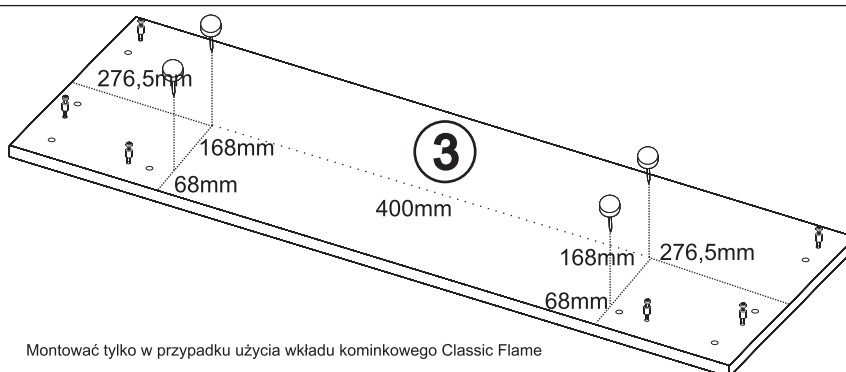

	(F36)
	x4






Montować tylko w przypadku użycia wkładu kominkowego Classic Flame

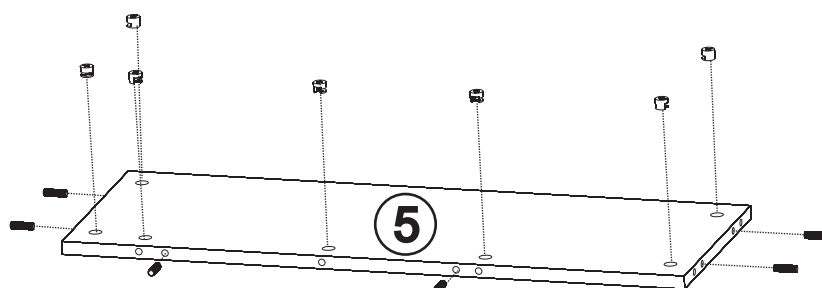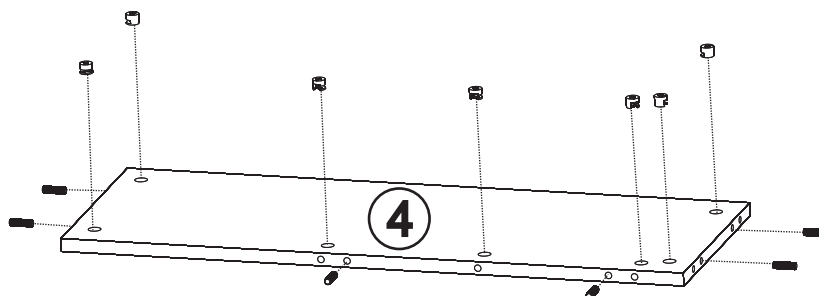


23WM-AV002WH





3/8

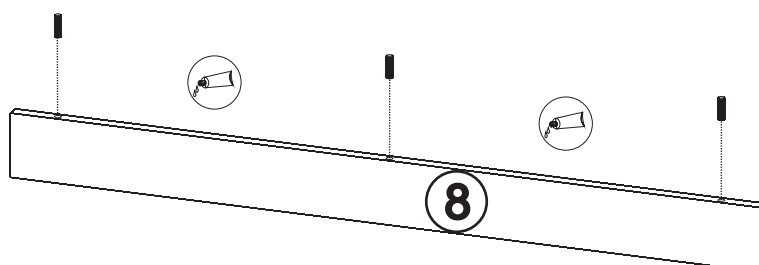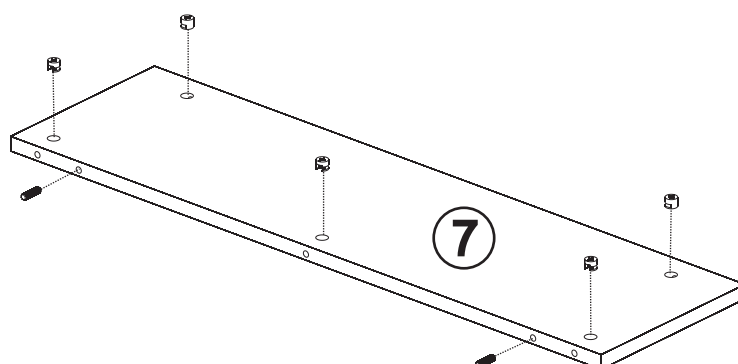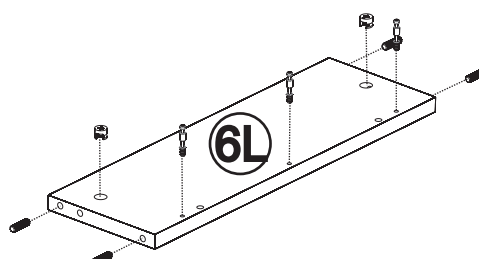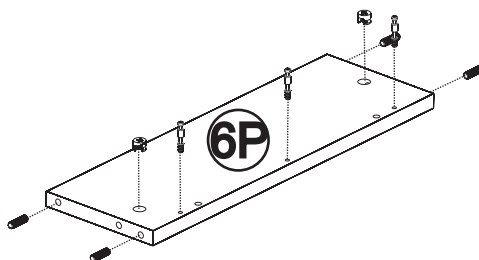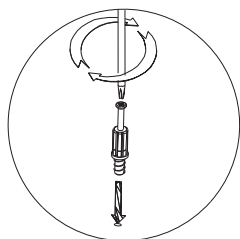

x2

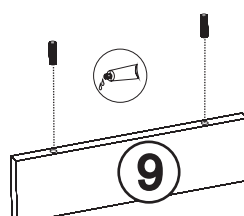







	(B1)
	x17
	(M1)
	x9
	(T1)
	x6
	(L1)
	x1

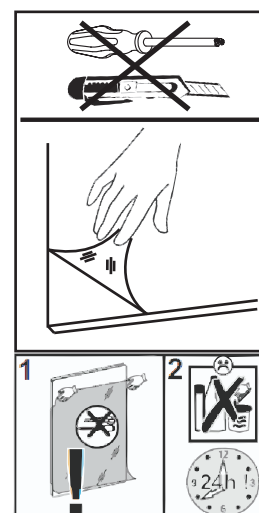

23WM-AV002WH



4/8

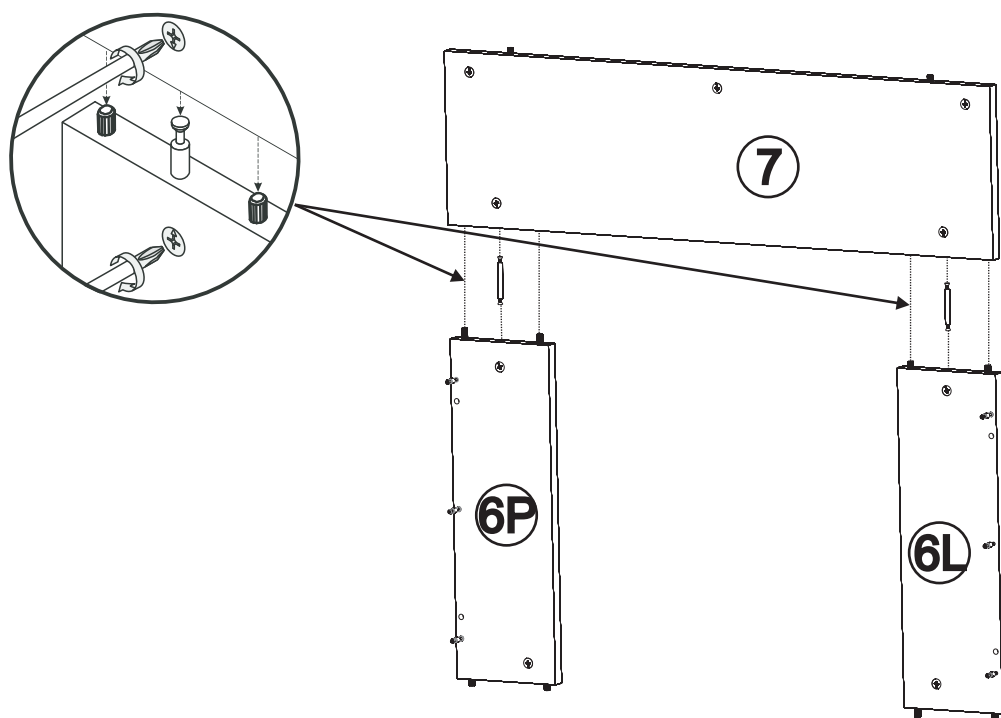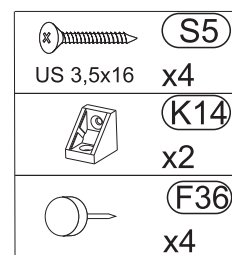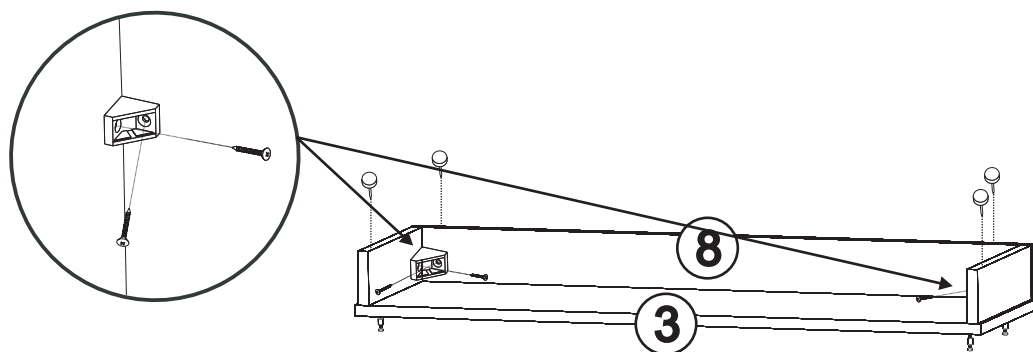
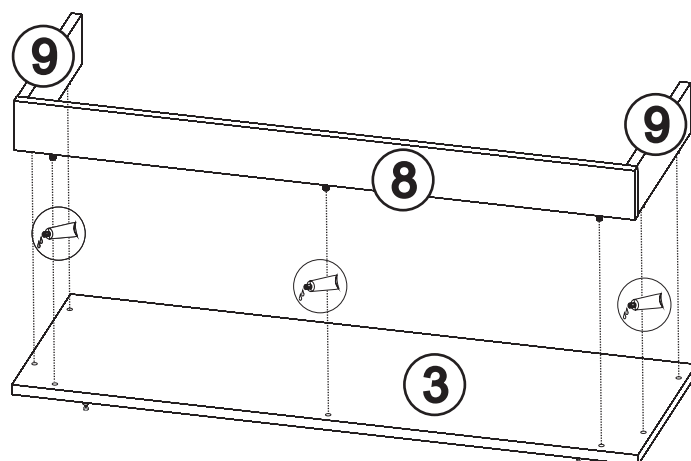


23WM-AV002WH



40min

5/8

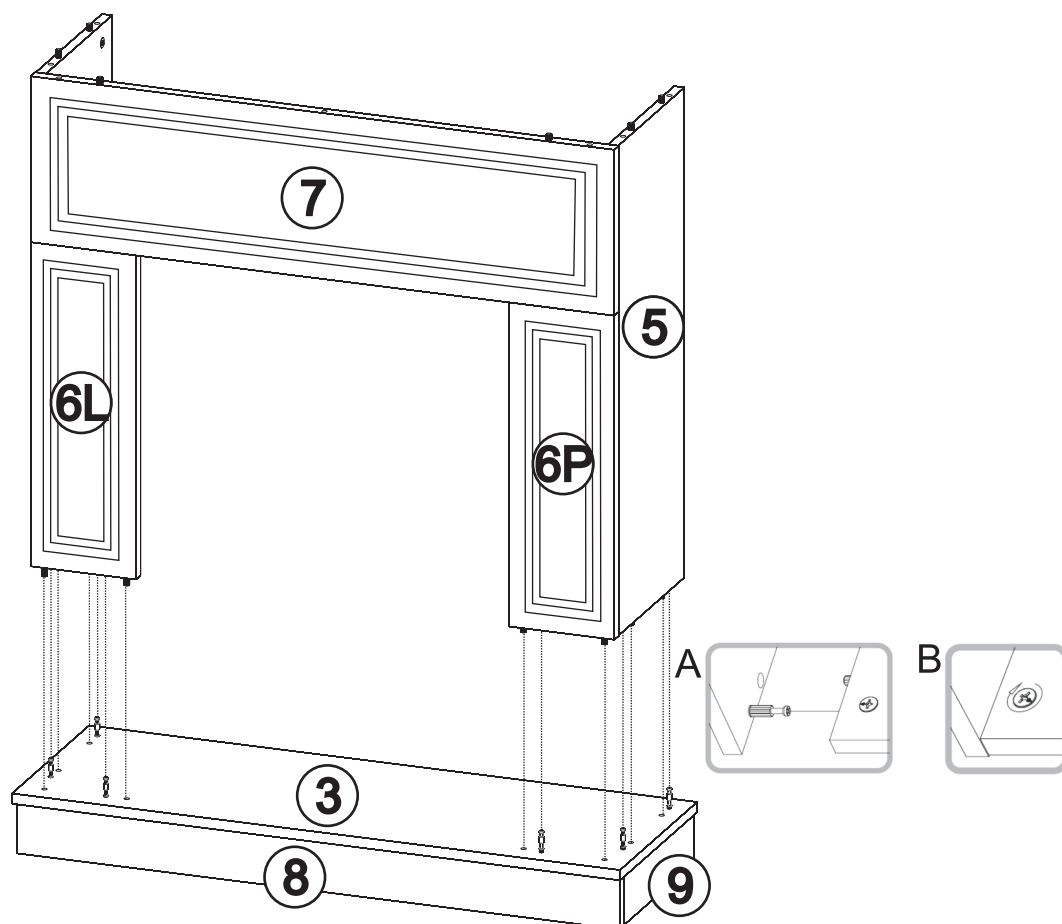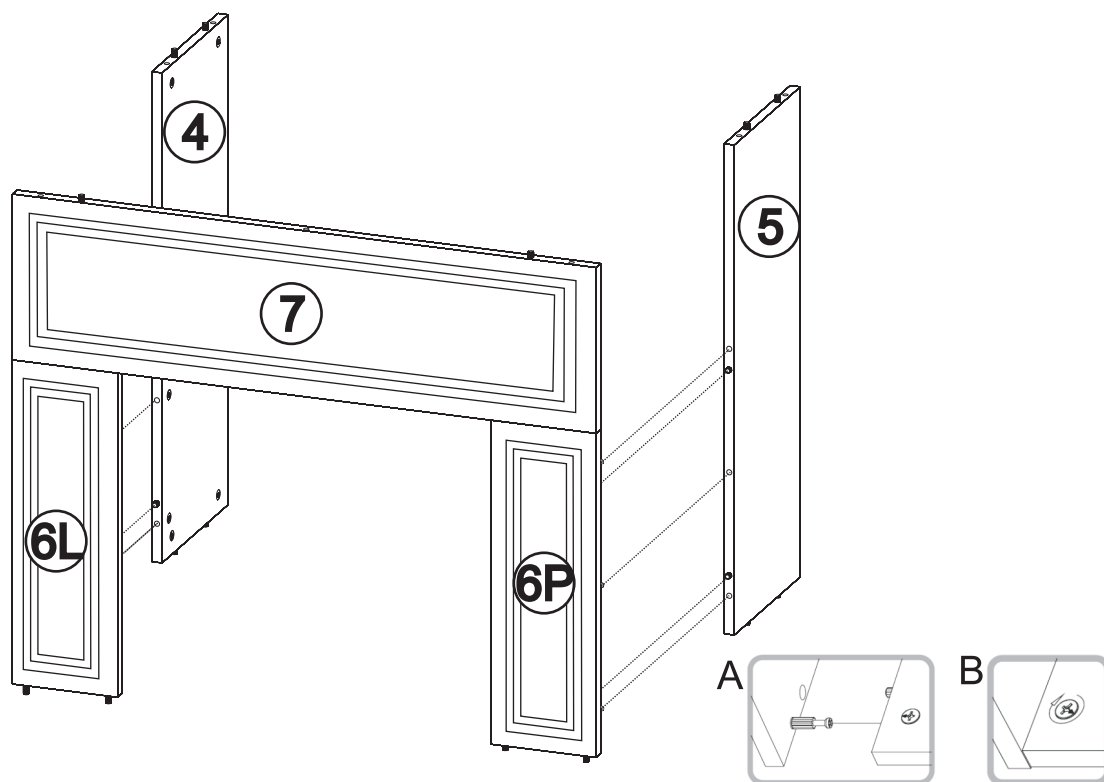


23WM-AV002WH




40min


6/8

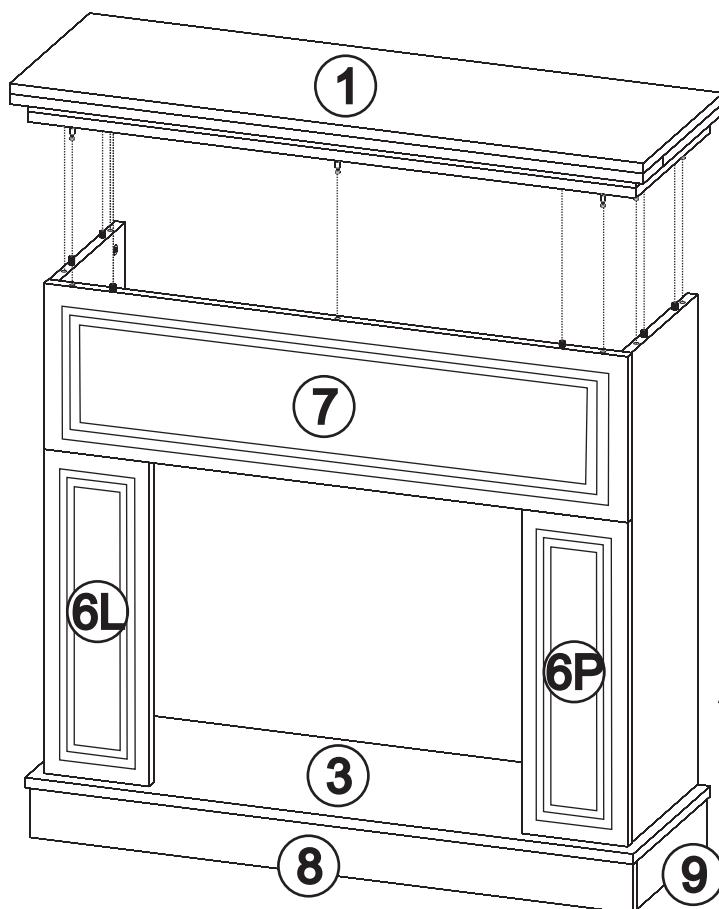

A

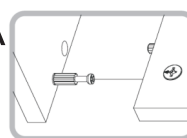

B

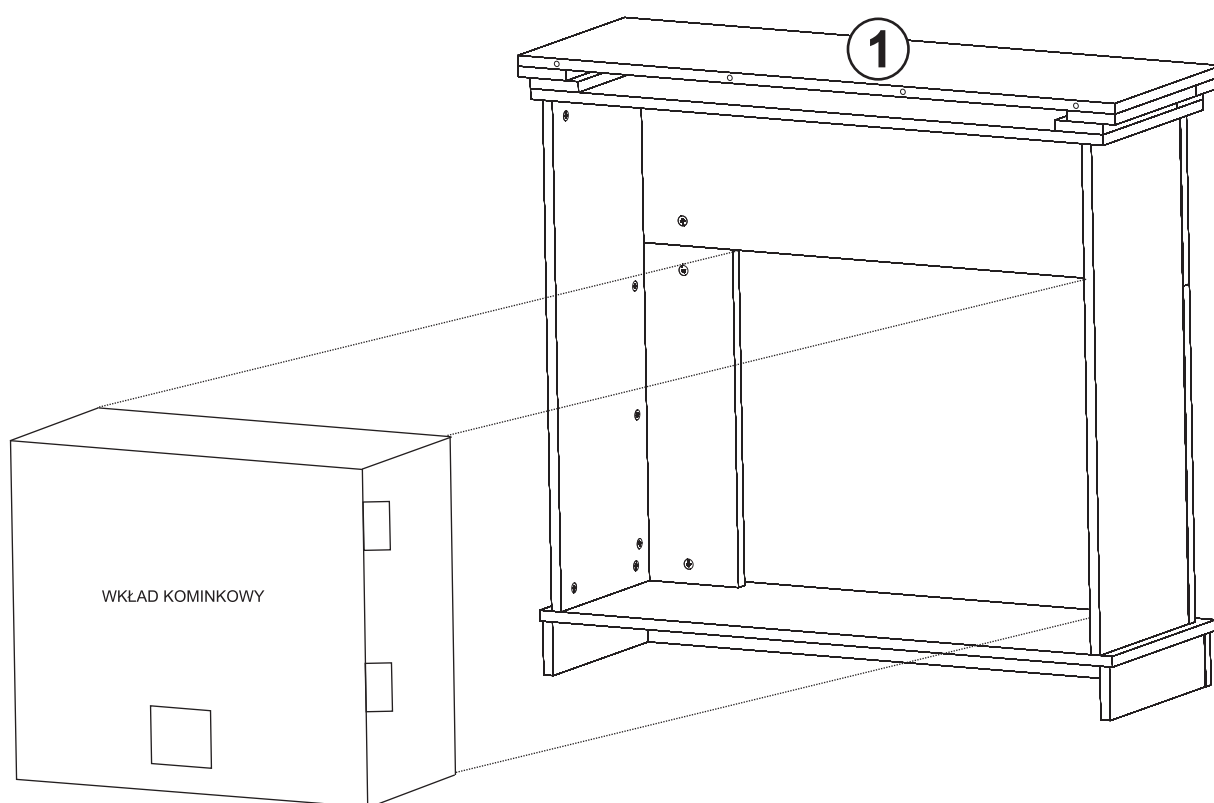


23WM-AV002WH





40min


7/8

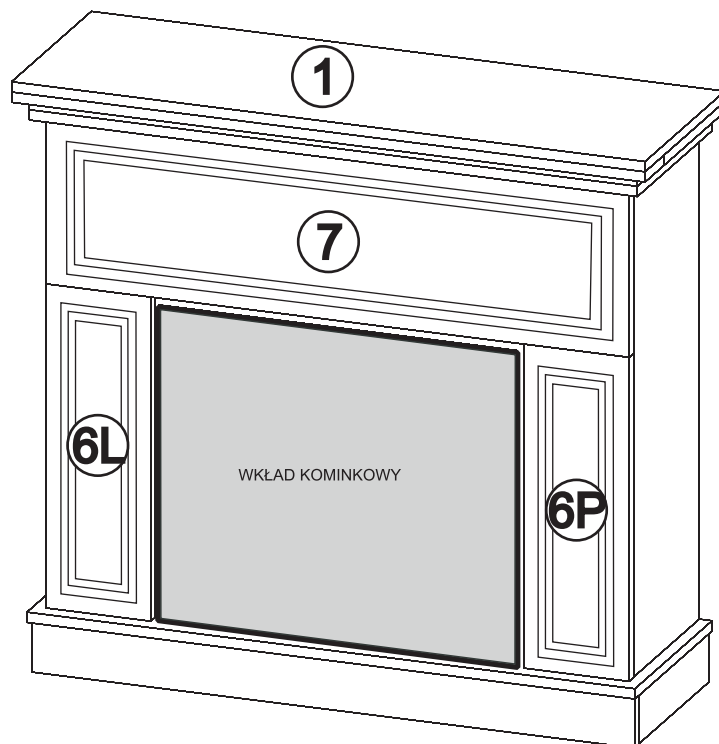

wkład kominka
pozycjonować tak,
aby uzyskać jednako-
szerokie szczeliny

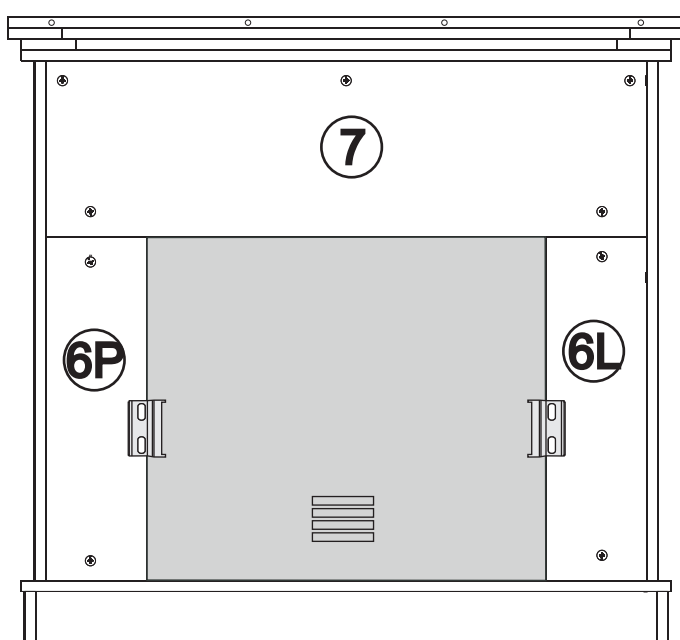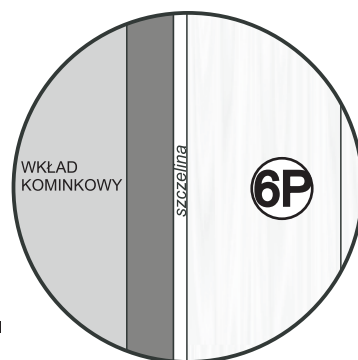

	F28
x2	
	P7
4,2x19	x4

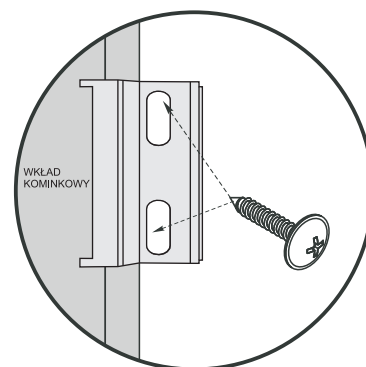

23WM-AV002WH



40min

8/8

